

THIS INSERT MOULDS PERFECTLY TO THE SHAPE OF THE BODY
AND CAN BE USED AS A FULL-BODY, SEAT AND BACKREST

90x50 cm

Part number

T3096M

Foam

0.7 kg

T3096L

0.9 kg

100x70 cm


T3500


1.7 kg

AEROBATIC AIRCRAFT

HOW TO USE

TOTIM® Racing

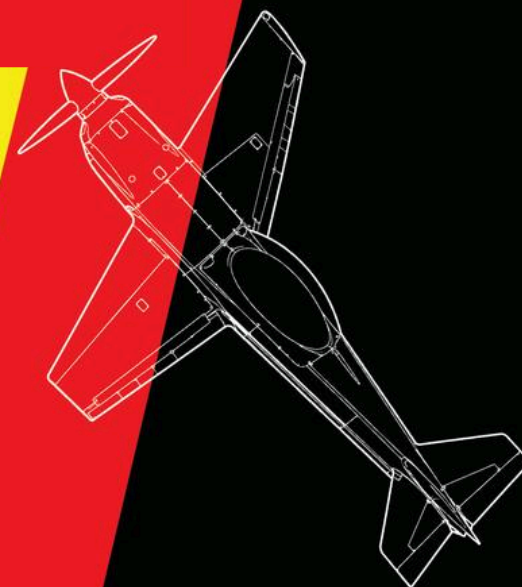

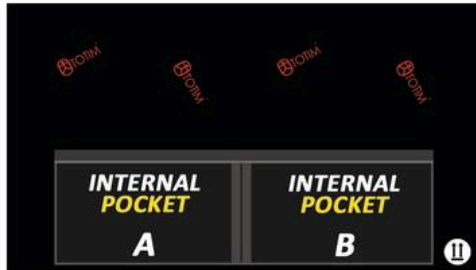

AEROBATIC AIRCRAFT

1 GET SET

PLACE TOTIMRACING KIT ON A RIGID FLAT SURFACE. IDENTIFY THE "SIDE UP" SYMBOL



2 POP IT


PUT YOUR HAND IN A DIAGONAL POSITION AT AN ANGLE TO POP THE MIDDLE SEAL WHILE AVOIDING ACCIDENTAL POPPING OF THE TOP SEAL



3 PRESS ON

APPLY FIRM PRESSURE DOWN WITH THE OTHER HAND IN THE DIRECTION OF THE YELLOW ARROW, GRADUALLY INCREASING PRESSURE IN THE DIRECTION OF THE GREEN ARROW, AS SHOWN IN THE IMAGE


DO THE SAME TO THE POCKET ON THE OTHER SIDE

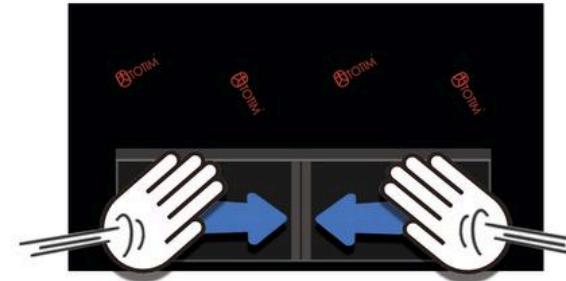

4 MIX FAST

ONCE BOTH POCKETS ARE POPPED, START MIXING THE TWO LIQUIDS (FOAM) AS FAST AS POSSIBLE. THE POUCH WILL START TO EXPAND UNTIL IT POPS THE TOP SEAL ON ITS OWN

MIX ACTIVATION TIME ABOUT 50 SECONDS

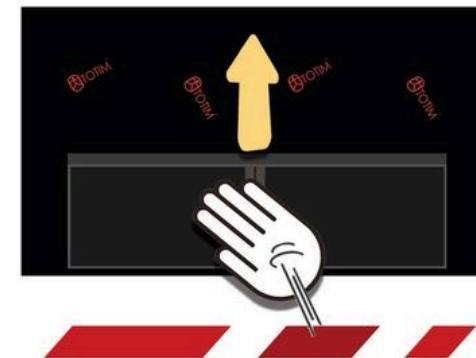

5 SPREAD IT

AFTER TOP SEAL IS BROKEN, REMOVE ALL FOAM FROM INSIDE POUCH
BASED ON YOUR NEEDS YOU CAN SPREAD FOAM WHEREVER IT IS NEEDED, BUT MOST COMMONLY ITS EVEN DOWN THE CENTER

**AFTER 30-40 SECONDS FROM TOP SEAL POP, PUT BAG INTO THE AIRPLANE AND PILOT SHOULD GET IN RIGHT AWAY, MAINTAINING THE "SIDE UP" POSITION.
2 CREW MEMBERS ARE BEST TO HOLD ALL 4 CORNERS OF THE BAG AS TAUGHT AS POSSIBLE TO AVOID CREASES IN THE BAG AS MUCH AS POSSIBLE**

- ▶ PILOT SHOULD PRESS INTO BAG EVENLY TO ENSURE EVEN SPREAD OF FOAM
- ▶ WAIT TIME FOR DRIVER 20-30 MINUTES
- ▶ LEAVE SEAT IN AIRPLANE FOR 40 MINUTES BEFORE CUTTING