

THIS INSERT MOULDS PERFECTLY TO THE SHAPE OF THE BODY  
AND CAN BE USED AS A FULL-BODY, SEAT,  
BACKREST OR LEG

**SEAT**

| Part number | Size      |
|-------------|-----------|
| T3500       | 100x70 cm |
| T3501       | 90x50 cm  |

**LEG / BACKREST**

|       |          |
|-------|----------|
| T3502 | 60x50 cm |
|-------|----------|


**LEG**

|       |          |
|-------|----------|
| T3503 | 50x40 cm |
|-------|----------|

**SIM RIGID FOAM KIT**


# HOW TO USE

**TOTIM® Racing**

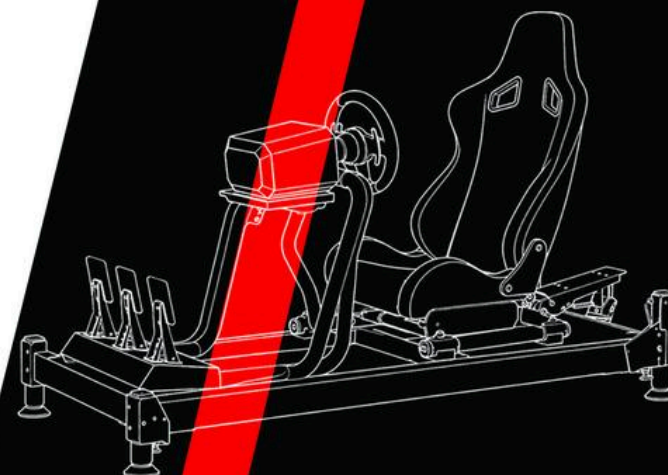

FIA — FLAME RESISTANCE TEST FOR THE FOAM MATERIALS EN ISO 15025:2003

SEAT COVERING CONFORMS TO FIA HOMOLOGATION SPECIFICATION — FLAME RESISTENCE UNI ISO 3795:1992

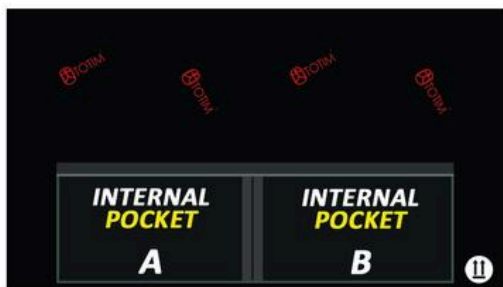

### SIM RIGID FOAM KIT

#### 1 GET SET

PLACE TOTIMRACING KIT ON A RIGID FLAT SURFACE. IDENTIFY THE "SIDE UP" SYMBOL



#### 2 POP IT


PUT YOUR HAND IN A DIAGONAL POSITION AT AN ANGLE TO POP THE MIDDLE SEAL WHILE AVOIDING ACCIDENTAL POPPING OF THE TOP SEAL



#### 3 PRESS ON

APPLY FIRM PRESSURE DOWN WITH THE OTHER HAND IN THE DIRECTION OF THE YELLOW ARROW, GRADUALLY INCREASING PRESSURE IN THE DIRECTION OF THE GREEN ARROW, AS SHOWN IN THE IMAGE


**DO THE SAME TO THE POCKET ON THE OTHER SIDE**

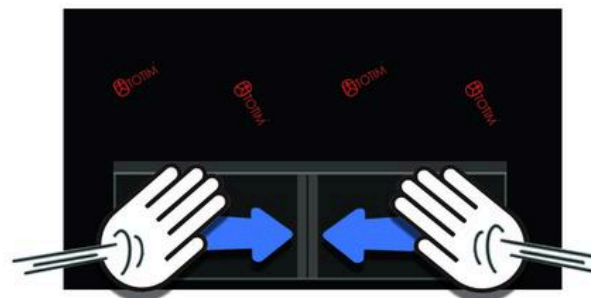

#### 4 MIX FAST

ONCE BOTH POCKETS ARE POPPED, START MIXING THE TWO LIQUIDS (FOAM) AS FAST AS POSSIBLE. THE POUCH WILL START TO EXPAND UNTIL IT POPS THE TOP SEAL ON ITS OWN

**MIX ACTIVATION TIME ABOUT 50 SECONDS**

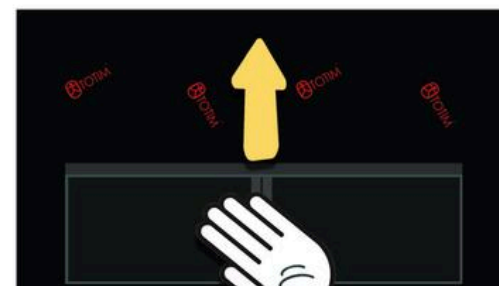

#### 5 SPREAD IT

AFTER TOP SEAL IS BROKEN, REMOVE ALL FOAM FROM INSIDE POUCH

BASED ON YOUR NEEDS YOU CAN SPREAD FOAM WHEREVER IT IS NEEDED, BUT MOST COMMONLY ITS EVEN DOWN THE CENTER

**AFTER 30-40 SECONDS FROM TOP SEAL POP, PUT THE KIT ON THE SEAT, GET IN RIGHT AWAY, MAINTAINING THE "SIDE UP" POSITION.**

- ▶ YOU SHOULD PRESS INTO BAG EVENLY TO ENSURE EVEN SPREAD OF FOAM
- ▶ WAIT TIME FOR MAKING THE MOULD: 20-30 MINUTES
- ▶ LEAVE SIM KIT ON THE SEAT FOR 40 MINUTES BEFORE USING